




Treadmill

Model No:

SPORT1250

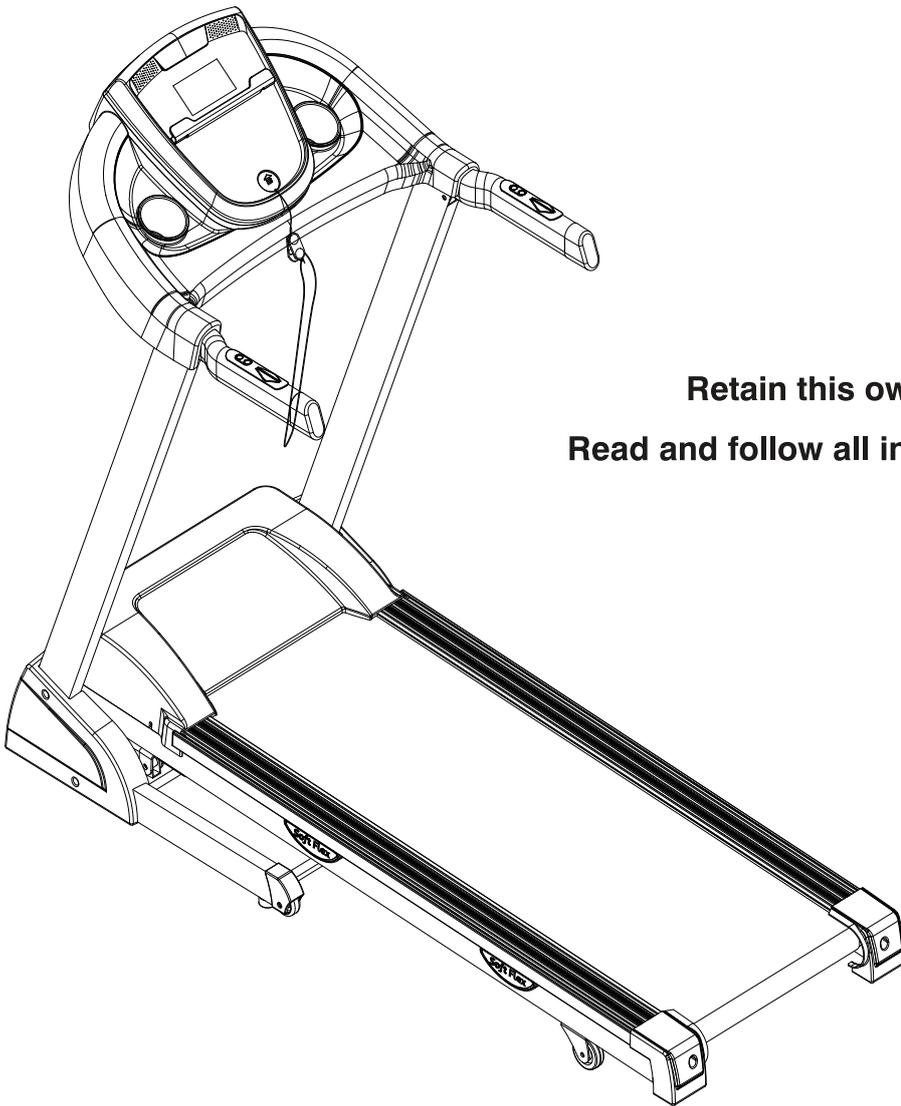

Retain this owner's manual for future reference •
Read and follow all instructions in this owner's manual •

CONTENT

CONTENT	1
IMPORTANT SAFETY PRECAUTIONS	2-3
MAIN TECHNICAL PARAMETERS AND PRODUCT OVERVIEW	3
ASSEMBLY INSTRUCTIONS	4-6
FOLDING & UNFOLDING INSTRUCTIONS	7
GROUNDING METHODS	8
OPERATION GUIDE	9-13
GETTING STARTED GUIDE	14
SAFETY EXERCISES	15
WARM-UP EXERCISES	16
MAINTENANCE INSTRUCTIONS	17
BELT ADJUSTMENT	18
EXPLODED DRAWING	19
PARTS LIST	20-22
ERROR CODE AND SIGNIFICANCE	23

IMPORTANT SAFETY PRECAUTIONS

WARNING: Before starting any exercise program, consult with your physician or health professional, especially the person who is above 35 years old people or has some health problems before. We take no responsibility for any troubles or hurts due to above reasons. Don't power on until you finish assembly the treadmill and covering the protected top of motor.

ATTENTIONS:

1. When using this treadmill, keep attaching the safety pull pin rope to your clothes or belt.
2. Do not plug anything into any parts of this equipment, or it may damage.
3. Position the treadmill on a clear, level surface. Do not place the treadmill on thick carpet as it may interfere with proper ventilation. Also, do not place the treadmill near water or outdoors.
4. Never start the treadmill while you are standing on the walking belt. After turning the power on and adjusting the speed control, there may be a pause before the walking belt begins to move, always stand on the foot rails on the sides of the frame until the belt is moving.
5. Wear appropriate clothing when exercising on the treadmill. Do not wear long, loose fitting clothing that could become caught in the treadmill. Always wear running or aerobic shoes with rubber soles.
6. Keep small children or pet away from the treadmill during operation.
7. Do not do exercise in 40 minutes after meal.
8. The treadmill is only used for adults, child use the treadmill must have adult on side.
9. Always hold the handrails when initially walking or running on the treadmill, until you are familiar with the use of the treadmill.
10. The treadmill is for indoor equipment, do not use outdoor. Position the treadmill on a clean, level surface.
Note the treadmill made by special equipment, please do not modify only one original parts.
11. The power cord of motorized treadmill is specialized. If the power cord is damaged, please purchase it from distributor or contact our company directly.
12. If the treadmill should suddenly increase in speed due to an electronics failure or the speed inadvertently increased, the treadmill will come to a sudden stop when the pull pin is disengaged from the console.
13. Do not connection in the middle of power cord or put the power cord near the high temperature heat, prohibit use the porous socket, otherwise it can cause fire or electric shock injury accident because of poor contact.
14. When the treadmill is not being used, the power cord should be unplugged and the safety pull pin removed. Note the power cord of motorized treadmill made by special equipment, and if it is broken, please contact distributor quickly.
15. The treadmill is for home use only.

16. The treadmill maximum user weight is **110KG**


17. Please do not overuse the treadmill so can avoid any injury and do not use incorrect way for your safety.

18. When the treadmill is not being used, please keep the safety pull pin in the safety place to avoid others use.

The main technical parameters











Input supply voltage : 240V	Working temperature: 0-40 °C
Speed range: 0.8-14KM/H	Incline range:12 level Motor incline
Power: 950W(1.25HP)	Current(A): 5A
Max. user weight: 110kg	Distance display range: 0.00-99.9km
Calories display range: 000-999	Time display range: 00: 00-99: 59 (min : sec)
Heart rate range: 50-200 (time / min)	Running surface: 420*1200mm
Product size: 1610*705*1385mm	Folding size: 870*705*1500mm

Product Overview

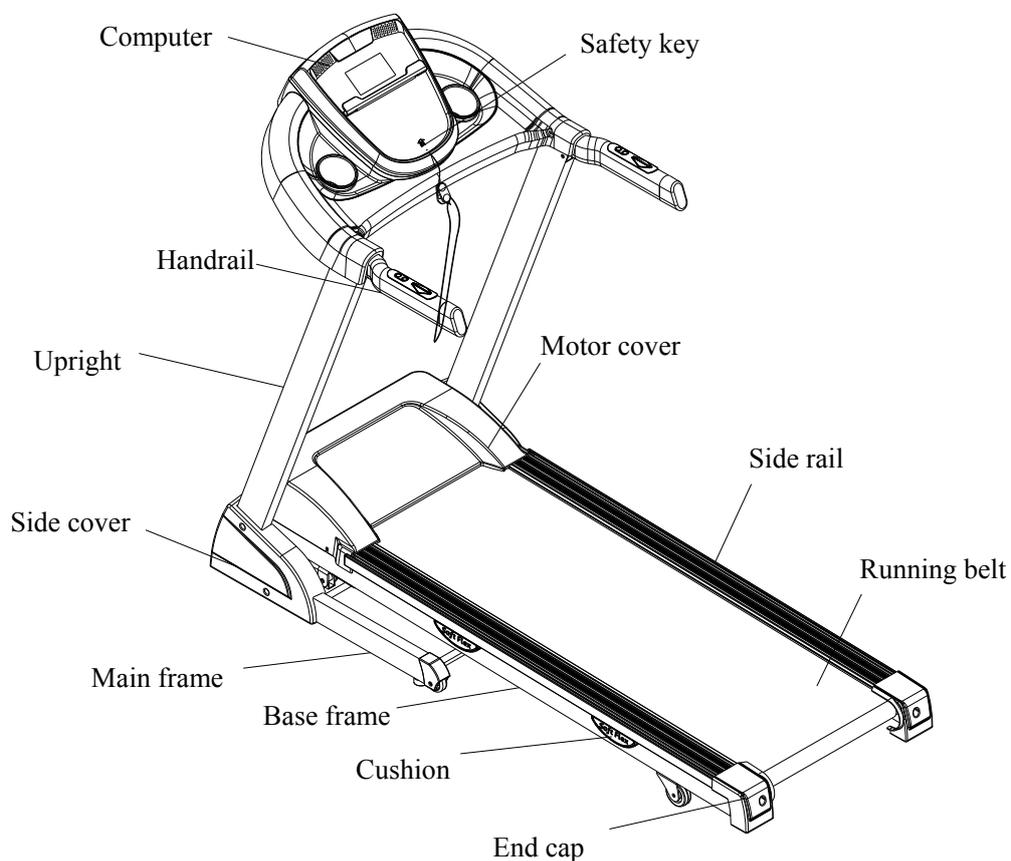


Assembly instruction


WHEN YOU OPEN THE CARTON, YOU WILL FIND THE BELOW SPARE PARTS:

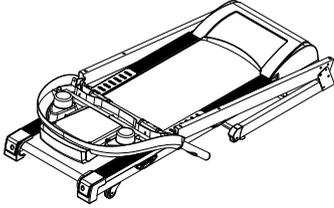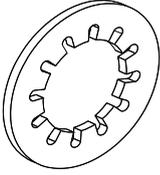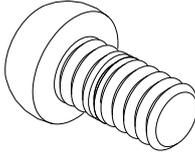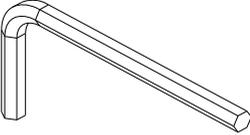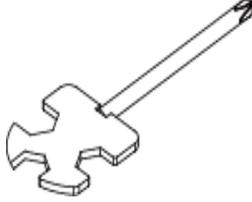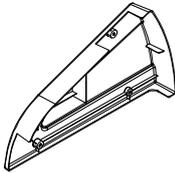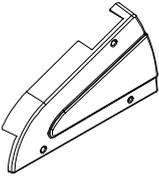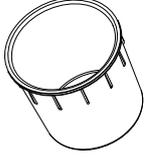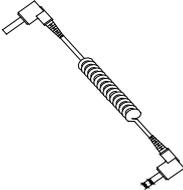1 Main frame 1set 	D17 Inner washer 8PCS 	D13 Round hex bolt M8*15 4PCS 	C13 Safety key 1set 
D3 Allen wrench 5MM 1 PC 	B18 Silicon oil 1 PC 	D1 Screw driver 1PC 	D11 Round hex bolt M8*45 4 PCS 
B11L Left side cover 1PC 	B11R Right side cover 1PC 	D48 Cross self-tapping bolt ST4.2*19 4PCS 	C49 Bottle 2PC 
C19 MP3 Line 1pc 			


STEP 1: According to the following steps to lift up the computer bracket. Be careful not press the line when folding.

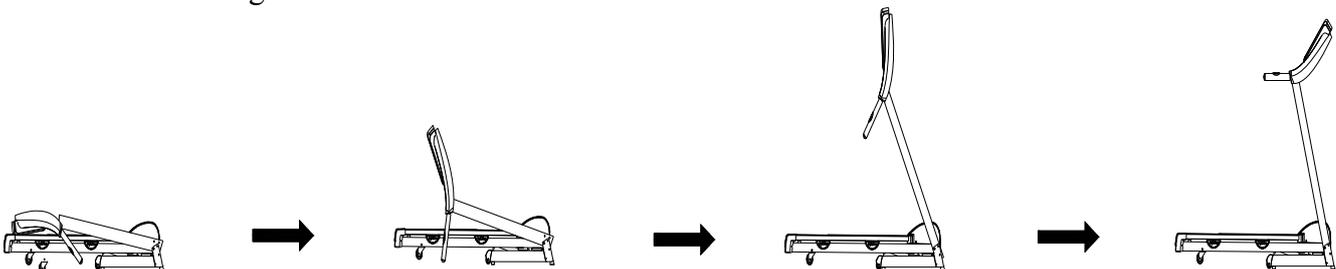


STEP 2: According to the picture to tighten the bolt M8*45 (D16) , M8*15 (D13) and inner washer (D17) . Then Locked with M8*15(D13) and inner washer (D17).

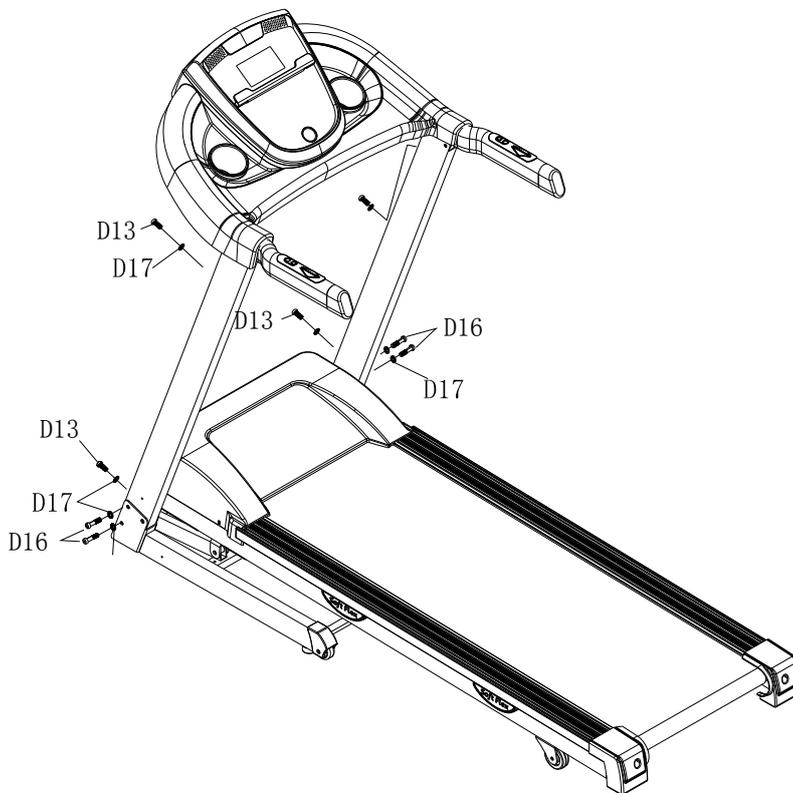

Step 4: Attach the front cover L(B11L)&R(B11R) to the base frame with bolt ST4.2*19(D48).

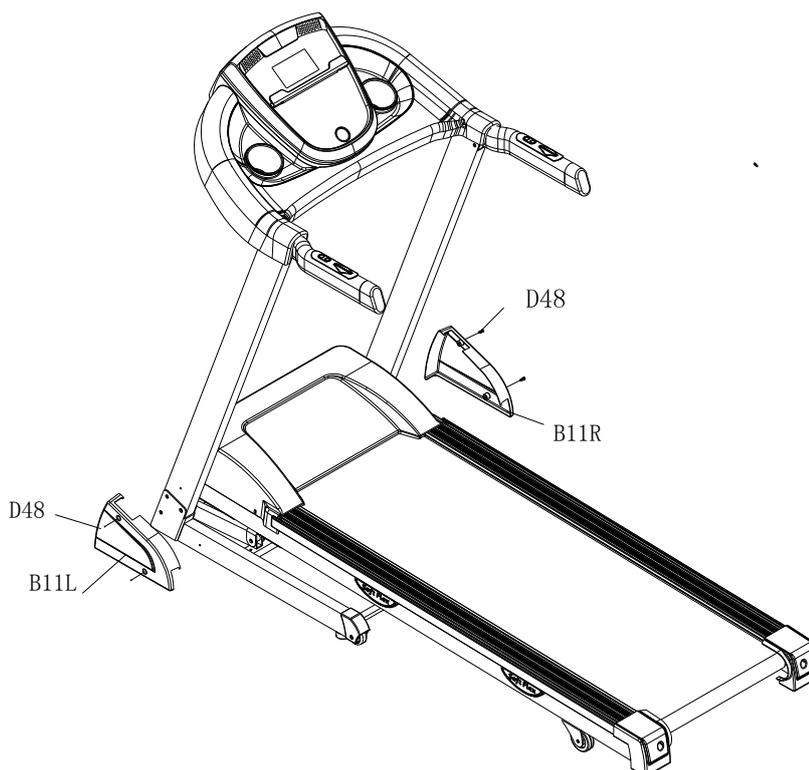


Step 5: Put on the Safety key (C13),MP3 line (C19) and put on the bottle(B49).

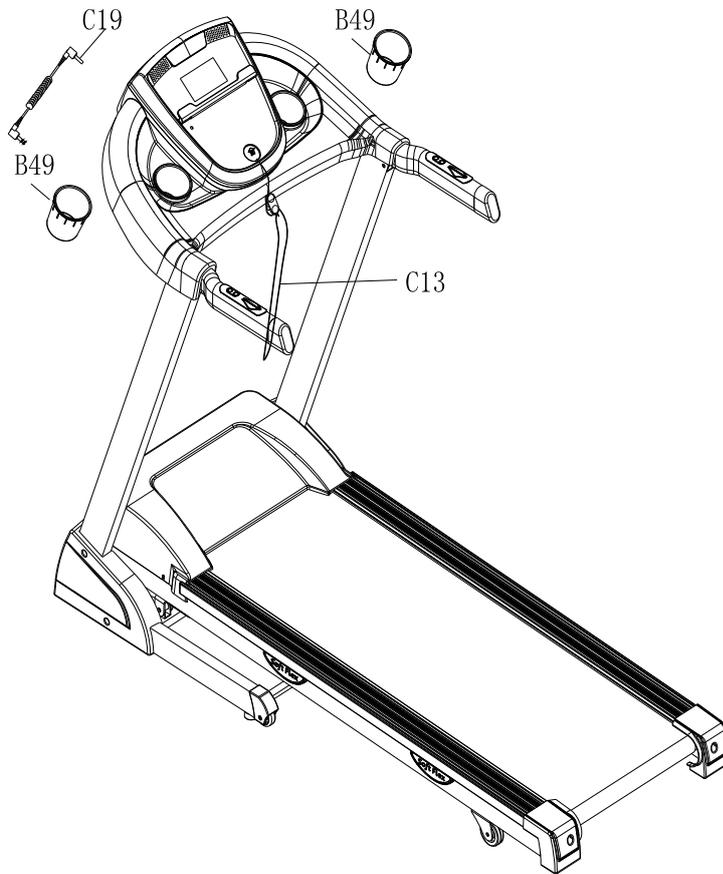


ATTENTION: Must confirm complete assembly as the required above and lock all bolts. Do the following operations after checking everything is OK. Before you use the treadmill, please read the instructions carefully.

Folding instruction

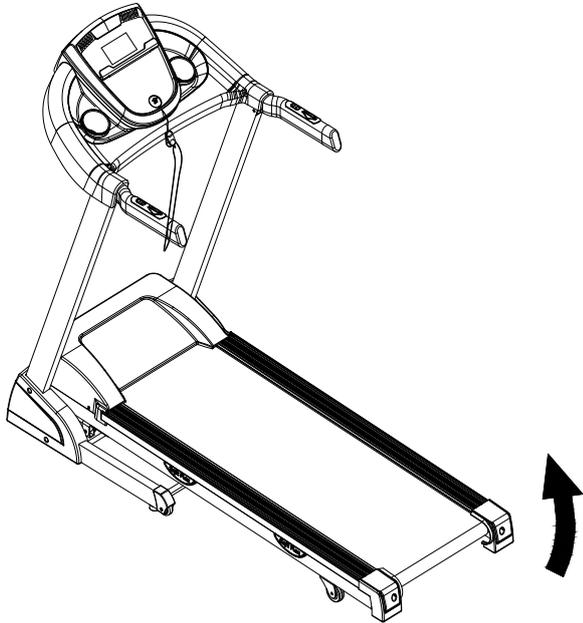

Lift up the machine and force to pull up until you heard "click" that made by safety casing stuck the pneumatic cylinder.

Unfolding instruction

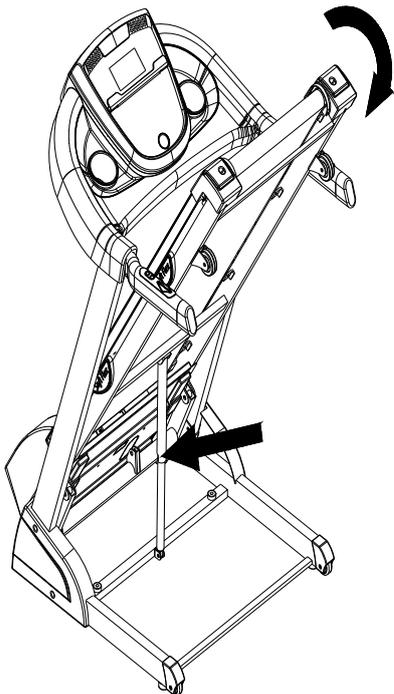

Push the safety sleeve with your foot lightly and pull down the machine at the same time as the arrow direction. Then the machine will fall down smoothly.

Grounding Methods


This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER – Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product – if it will not fit the outlet, Please find a proper outlet installed by a qualified electrician.

This product is for use on a nominal 240V circuit and has a grounding plug . Make that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

Operation Guide

1.1. WINDOW DISPLAY

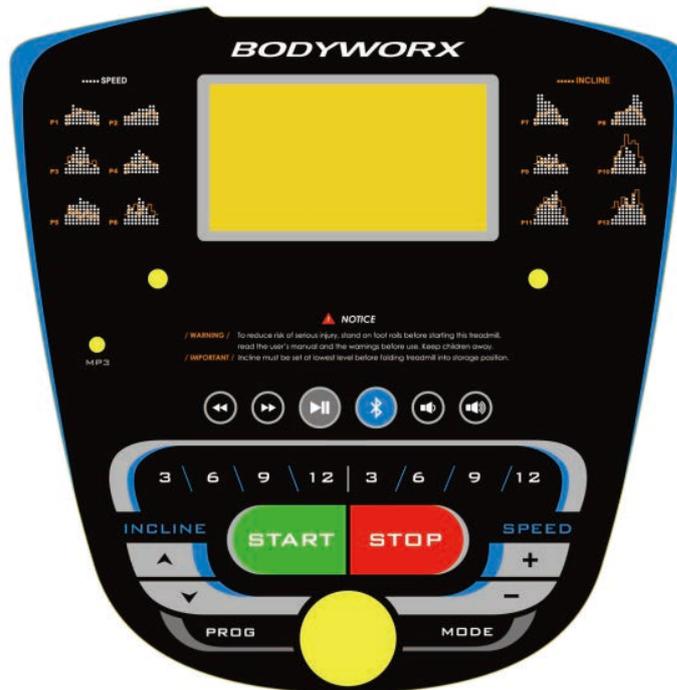

1.2. START

Normal start after 5 seconds countdown

1.3 PROGRAM

1 manual mode, 12 pre-set programs, 1 body fat program, 3 countdown function, 3 USER.

1.4. SAFETY LOCK FUNCTION

The window shows "----" when take away the safety lock and the treadmill will stop quickly with "didi" alarm noise. And put the safety lock on, the computer will display for 3 seconds and the date count down to "0"

1.5. BUTTON FUNCTION

1.5.1. START/STOP

"START"--When the treadmill is not running, press this button to start, speed is "0.8".

"STOP"--When the treadmill is running, press this button to stop, then set program default and then return to manual mode after stopped.

1.5.2 “PROGRAM” BUTTON

When the treadmill is not running, press this button can circle choose from manual mode to pre-set mode P1-P12 and body fat.

1.5.3 “MODE” BUTTON

When the treadmill is not running, press this button to choose countdown modes: “H-1”, “H-2”, “H-3”; “H-1” is the time countdown mode, and “H-2” is the distance countdown mode, “H-3” is the calorie countdown mode; press the “SPEED+/-” or “INCLINE+/-” button to adjust the data. After that, press the “START” button to start this treadmill.

1.5.4 “SPEED +/-” BUTTON

SPEED +/- , Adjust speed when treadmill start, the increment is 0.1km/time in kilometer. Press the button more than 2 seconds, and it will be up or down automatically.

1.5.5 SPEED QUICK BUTTON

Press the speed quick button 3km/h,6km/h,9km/h,12km/h to adjust the speed directly when the treadmill is running.

1.5.6 “INCLINE ▲、▼” BUTTON

INCLINE +/- , Adjust incline when treadmill start; the increment is 1 level/time. Press the button more than 2 seconds, and it will be up or down automatically.

1.5.7 INCLINE QUICK BUTTON

Press the incline quick button 3,6,9,12 to adjust the incline directly when the treadmill is running

1.6. DISPLAY FUNCTION

1.6.1 SPEED

Display running speed

1.6.2 TIME

Display the running time or countdown time

1.6.3 DISTANCE

Display the running total distance or distance countdown.

1.6.4 CALORIE

Display the calorie or calorie countdown

1.6.5 INCLINE

Display the incline

1.6.6 PULSE

Display pulse data

1.6.7 ALL WINDOW DISPLAY DATA RANGE

TIME: 0:00 – 99.59(MIN)

DISTANCE: 0.00 – 99.9(KM)

CALORIES: 0.0 – 999 (C)

SPEED: 0.8-14.0(km/h)

PULSE: 50 – 200 (BPM)

INCLINE: 0 – 12

1.7 PULSE FUNCTION

When the treadmill is running, hold the hand pulse about 5 seconds, it will display pulse data. The pulse data range is 50-200 times/ minute. It has heart-shaped graphics when testing pulse. This data is only for reference, can not be as medical data.

1.8 PROGRAM EXERCISE CHART

MODE \ TIME		SET TIME /10 = EVERY GRADE TIME									
		1	2	3	4	5	6	7	8	9	10
P1	SPEED	3	3	6	5	5	4	4	4	4	3
	INCLINE	0	3	3	3	4	4	4	1	1	0
P2	SPEED	3	3	4	4	5	5	5	6	6	4
	INCLINE	2	2	2	3	3	3	3	4	4	2
P3	SPEED	2	4	6	8	7	8	6	2	3	2
	INCLINE	3	5	4	4	3	4	4	3	4	2
P4	SPEED	3	3	5	6	7	6	5	4	3	3
	INCLINE	0	3	3	2	2	5	5	3	3	2
P5	SPEED	3	6	6	6	8	7	7	5	5	4
	INCLINE	3	5	3	4	2	3	4	2	3	2
P6	SPEED	2	6	5	4	8	7	5	3	3	2
	INCLINE	3	4	5	6	3	5	5	6	4	3
P7	SPEED	2	9	9	7	7	6	5	3	2	2
	INCLINE	0	3	3	3	4	4	4	1	1	0
P8	SPEED	2	4	4	4	5	6	8	8	6	2

	INCLINE	1	1	4	4	4	5	5	4	3	2
P9	SPEED	2	4	5	5	6	5	6	3	3	2
	INCLINE	3	5	3	4	2	3	4	2	3	2
P10	SPEED	2	5	7	5	8	6	5	2	4	3
	INCLINE	1	5	6	8	12	9	10	9	5	3
P11	SPEED	2	5	6	7	8	9	10	5	3	2
	INCLINE	3	5	6	8	6	5	8	7	5	2
P12	SPEED	2	3	5	6	8	6	9	6	5	3
	INCLINE	5	7	5	8	6	5	9	10	6	2

1.9 Manual model operation

1.9.1 Press start key, time count down 3 seconds, then treadmill will start to work with initial speed 0.8km/h 1.9.2

Press speed +/-, you can adjust the speed

1.9.3 Press incline ▲/▼, you can adjust the incline

1.9.4 Press stop, you can stop treadmill at working state

1.9.5 Press quick speed key, you can quickly adjust the speed you want

1.9.6 Press quick incline key, you can quickly adjust the incline you want

1.10 3 COUNTDOWN FUNCTION PARAMETER DATA

Countdown time initial setting 30: 00 minutes, setting range 5: 00---99: 00 minutes, each step 1: 00.

Countdown calorie initial setting 50therm, setting range 10---999 term, each step 10.

Countdown distance initial setting 1.0km, setting range 0.5---99.9 km, each step 0.1

Cycle switch order is: manual, time, distance, calories.

1.11 BODY TESTER (FAT)

At the beginning state, press “PROGRAM” continually to enter “FAT“ body fat test, window display “FAT”. Press “MODE” to enter (F1 SEX, F2 AGE, F3 HEIGHT, F4 WEIGHT). Press “SPEED+”, “SPEED-” to set. After setting, the computer will display F5 and grasp the hand pulse, the window will display your body quality index.

The body quality index is to test the relation between height and weight not the body scale.

The body FAT suits for any male and female to adjust the weight according together with other body quality index. The ideal FAT should be between 20-25, if under 19, it means too thin. If between 25 and 29, it means overweight, if over 30, it means obesity. (The data is just for reference and can not be as medicinal data).

-
- 01 Sex 01 Male 02 Female
 - 02 Age 10-----99
 - 03 Height 100----200
 - 04 Weight 20-----150
 - 05 FAT \leq 19 Under weight
 - FAT= (20---25) Normal weight
 - FAT= (25---29) Over weight
 - FAT \geq 30 Obesity

1.12 User Program

Besides 12 pre-set programs, there have 3 user-defined programs: U1, U2 and U3 Each user program has 10 segments. The user can set the desired speed and incline .Press "PROGRAM" button to choose U1 ,U2 or U3,press "MODE" button to enter setting condition, then set the time of the first segment. Press "SPEED+" and "SPEED-" to set speed. Press” INCLINE+” and “INCLINE-“ to set incline. Press "MODE" button and your choice will be set. The next workout segment will flash, go through the same setup as you completed with segment one. You must complete all 10 segments and then your user program is ready to use. Press “STOP” key to return to last segment setting any time.

1.13 OTHERS

1.13.1 The system will enter into power saving mode automatically if there is no any action within 10 minutes under IDLE MODE and there is no display and backlit on the computer. Press any key to resume the system.

1.13.2 Countdown time, countdown calorie and countdown distance, you just can set one of them at one time, press last item to set running, the setting parameter is countdown, others display normal data.

1.13.3 MP3 audio function: Insert the MP3 line in the input hole of the right side in the computer.

1.14.4 Bluetooth music function: Press the Bluetooth key till the display show Bluetooth icon, turn on the Bluetooth of your device to match with computer and play the music, user can increase or decrease the volume from the device, and also can turn back o the last song or jump to next song.

Getting started guide

PREPARE

If you are around 35 years old, or have health problem, even this is your first time to do fitness exercise, please consult doctor or professional before use it.

Before do exercise, please stand on the side to learn how to operate, such as start, stop and speed adjustment. After that stand on the plastic deck of the treadmill board, catch hold of the handrail, start by 1.6--3.2 km/h low speed, stand straight, look forward, one foot try to do few times, then stand on the belt to do exercise. After adapting, you can adjust the speed to 3--5 km/h and keep doing about 10 minutes, then stop.

EXERCISE

Please stand on the side to learn how to operate, such as speed and incline, until you know it then can start do exercise. Walk 1 km by constant step need about 15-25 minutes, please record it in fact. And walk 1km by 4.8 km/h need about 12 minutes. If you can do it easily by few times, then can adjust the high speed and incline, and go on to do 30 minutes, you can take a good exercise. Before do slow walk exercise, please remember it is for your health and can not irritable.

AMOUNT OF EXERCISE

SHORTCUT——The best way to save time is do 15-20 minutes exercise.

Warm up 2 minutes by 4.8 km/h, and adjust the speed to 5.3 km/h and 5.8 km/h, continue do exercise by this two speeds. Then add 0.3 km/h per 2mins speed increase, until you feel breathing quickened but not breathe hard. Keep this speed to do exercise, if feels uncomfortable, please reduce 0.3 km/h. Leave 4 minutes to reduce speed at last. If you fell it is hard to strengthen exercises by increase speed, then you can choose the way of increase incline slowly, it also can strengthen exercise.

EXERCISE FREQUENCY

Target is 3--5 times per week, do 15-60mins each time. It is better to make a time schedule, do not accord to your favor. You can get the strenuous exercise degree through adjusting speed and incline. We'd suggest that do not set incline when start do exercise.

SAFETY EXERCISE


Please consult professional staff before do exercise. He can help recommendation exercise rate/intension and time according to your age and health condition. When running, if you feel chest tightness or chest pain, irregular Heartbeats, short of breath, dizziness or other unwell, please stop immediately! And consult professional before you want continually to do exercise. If you often use treadmill, you can choose normal walk speed or jog speed.

If you have no experience or can't make sure the best testing speed, you can reference below standard:

Speed 1-3.0 km	weak constitution people.
Speed 3.0-4.5 km	sedentary or not often exercise people.
Speed 4.5-6.0 km	walking quickly people.
Speed 6.0-7.5 km	fast walk people.
Speed 7.5-9.0 km	jogger.
Speed 9.0-12.0 km	intermediate speed runner.
More than 12.0 km	excellent runner.

ATTENTION: It is suitable for walker to choose less than or equal to 6 km speed.

Warm-up Exercise

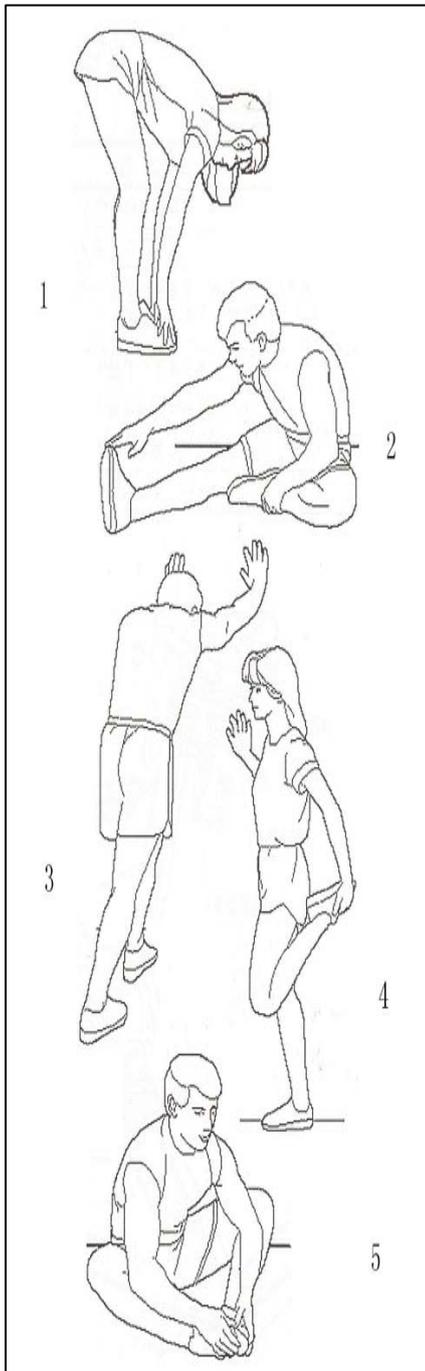

It is better to do some warm-up exercise. Warm the muscle easy stretch, so use 5-10 mins to warm-up. Then stop and according below method to do stretch exercise for five times, and each foot do 10 seconds or more every time. After running, do those stretch exercises again.

1. Reach Down : Knees slightly bent and body slowly bent forward, back and shoulders relax, trying to touch toes. Keep 10-15 seconds and relax. Repeat 3 times(See picture 1).

2. Hamstrings Stretches: Sitting on a clean cushion, put one leg straight, the other inward and close to the inside of the straight leg. Try to touch your toes with your hands. Keeping for 10 to 15 seconds, and relax. Repeat 3 times for each leg (See picture 2).

3. Crus and Feet Tendon Stretches: Standing with two hands on the wall or tree, one leg behind. Keeping your legs straight and the heel on the ground, tilt to the wall or tree. Keep 10 to 15 seconds, and relax. Repeat 3 times for each leg (See picture 3).

4. Quadriceps Stretches: Keeping your balance with your left hand holding on the wall or table, then stretch your right heel toward your buttocks slowly, until you feel very tense in the front of your thigh. Keep 10 to 15 seconds, and relax. Repeat 3 times for each leg (See picture 4).

5. Sartorius (Inner Muscles of the Thigh Muscle Stretches: Sitting down with your soles opposite and knees outward Pull your feet toward your groin Keep 10 to 15 seconds, and relax. Repeat 3 times (See picture 5).

Maintenance Instruction

WARNING: Please make sure pull out the treadmill's power plug before cleaning or maintaining the product.

CLEANSING: General cleaning of the unit will greatly prolong the treadmill's life.


Keep treadmill clean by dusting regularly. Be sure to clean the exposed part of the deck on either side of the walking belt and also the side rails. This reduces the build up of foreign material underneath the walking belt. Make sure the shoes are clean. The top of the belt may be cleaned with a wet soapy cloth. Be careful to keep liquid away from inside the motorized treadmill frame or from underneath the belt.

WARNING: Always unplug the treadmill from the electrical outlet before removing the motor cover. At least once a year remove the motor cover and vacuum under the motor cover. This treadmill's walking belt and deck are equipped with a pre-lubricated, low maintenance deck system. The belt/ deck friction may play a major role in the function and life of your treadmill, thus requiring periodic lubrication. We recommend a periodic inspection of the deck.

We recommend lubrication of the deck according to the following timetable:


Light user (less than 3 hours/ week)	Every 60 days
Medium user (3-5 hours/ week) Heavy	Every 45 days
user (more than 5 hours/ week)	Every 30 days

We suggest you buy lubricating oil from local distributors or contact our company directly. Pay attention, any other maintains please ask professionals for help.

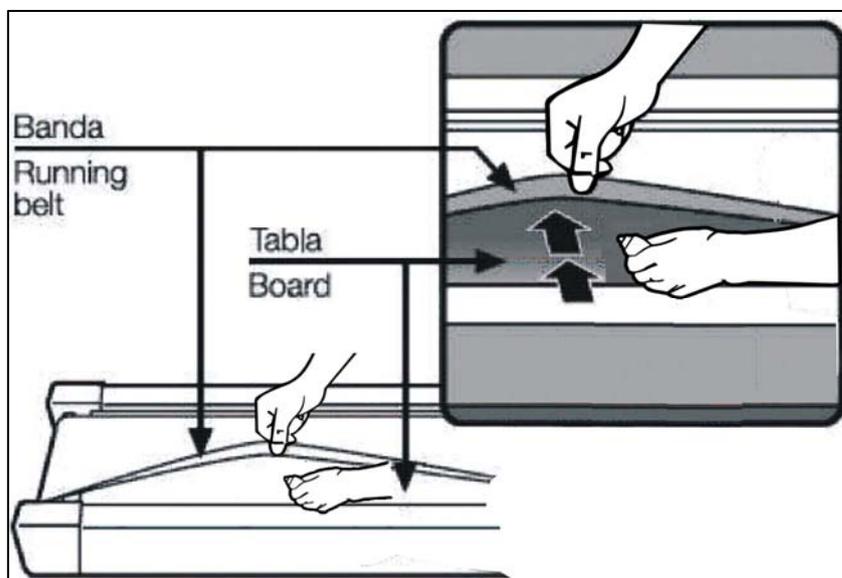

Belt Adjustment

Place treadmill on a level surface. Make treadmill run at approximately 6-8 km/h, observe the running belt deviate condition.

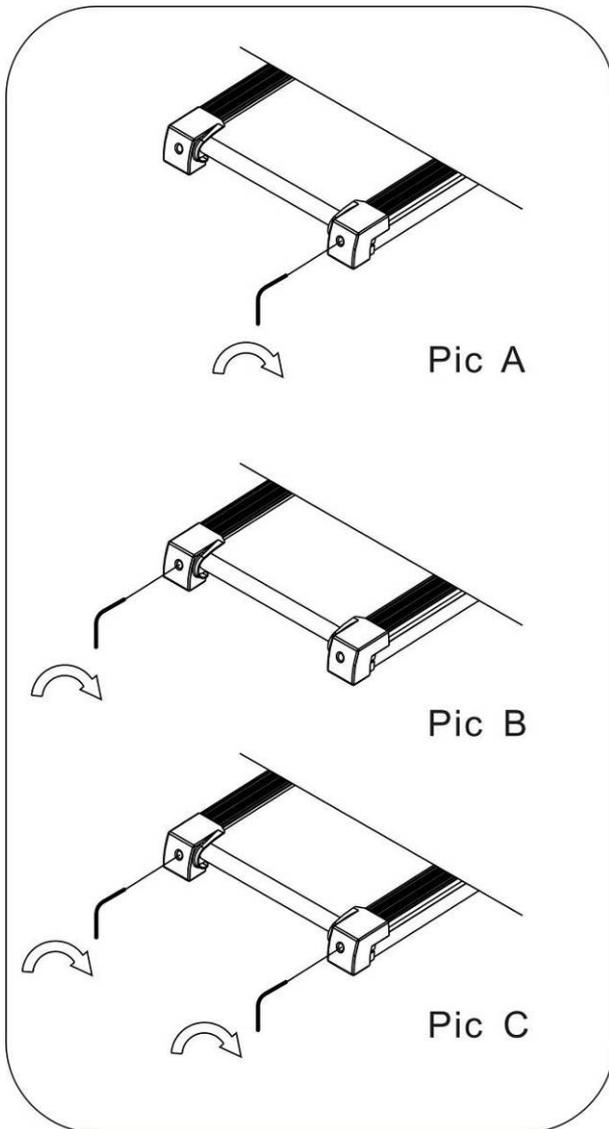


If the belt has drifted to the right, unplug the safety lock and power switch, and turn the right adjusting bolt 1/4 turn clockwise, then insert the power switch and safety lock, make the treadmill running, observe the running belt deviate condition. Repeat above steps until the running belt be placed in the middle. **See picture A**

Once the treadmill belt swerving to the left, unplug the safety lock, turn off the power, then with the left adjusting bolt clockwise rotation 1 / 4 laps, and turn on the safety lock and power to make treadmill running, checking the deviation of the treadmill belt. Repeat the above steps until the belt centered. **See picture B**

The treadmill belt will gradually relax after above steps or after a period of time using, unplug the safety lock, and turn off the power, with the two adjusting bolt clockwise rotation 1 / 4 laps, and turn on the safety lock and power to make treadmill running, then standing on the belt to confirm the tightness. Repeat the above steps until the belt moderate tightness. **See picture C**

Exploded Drawing

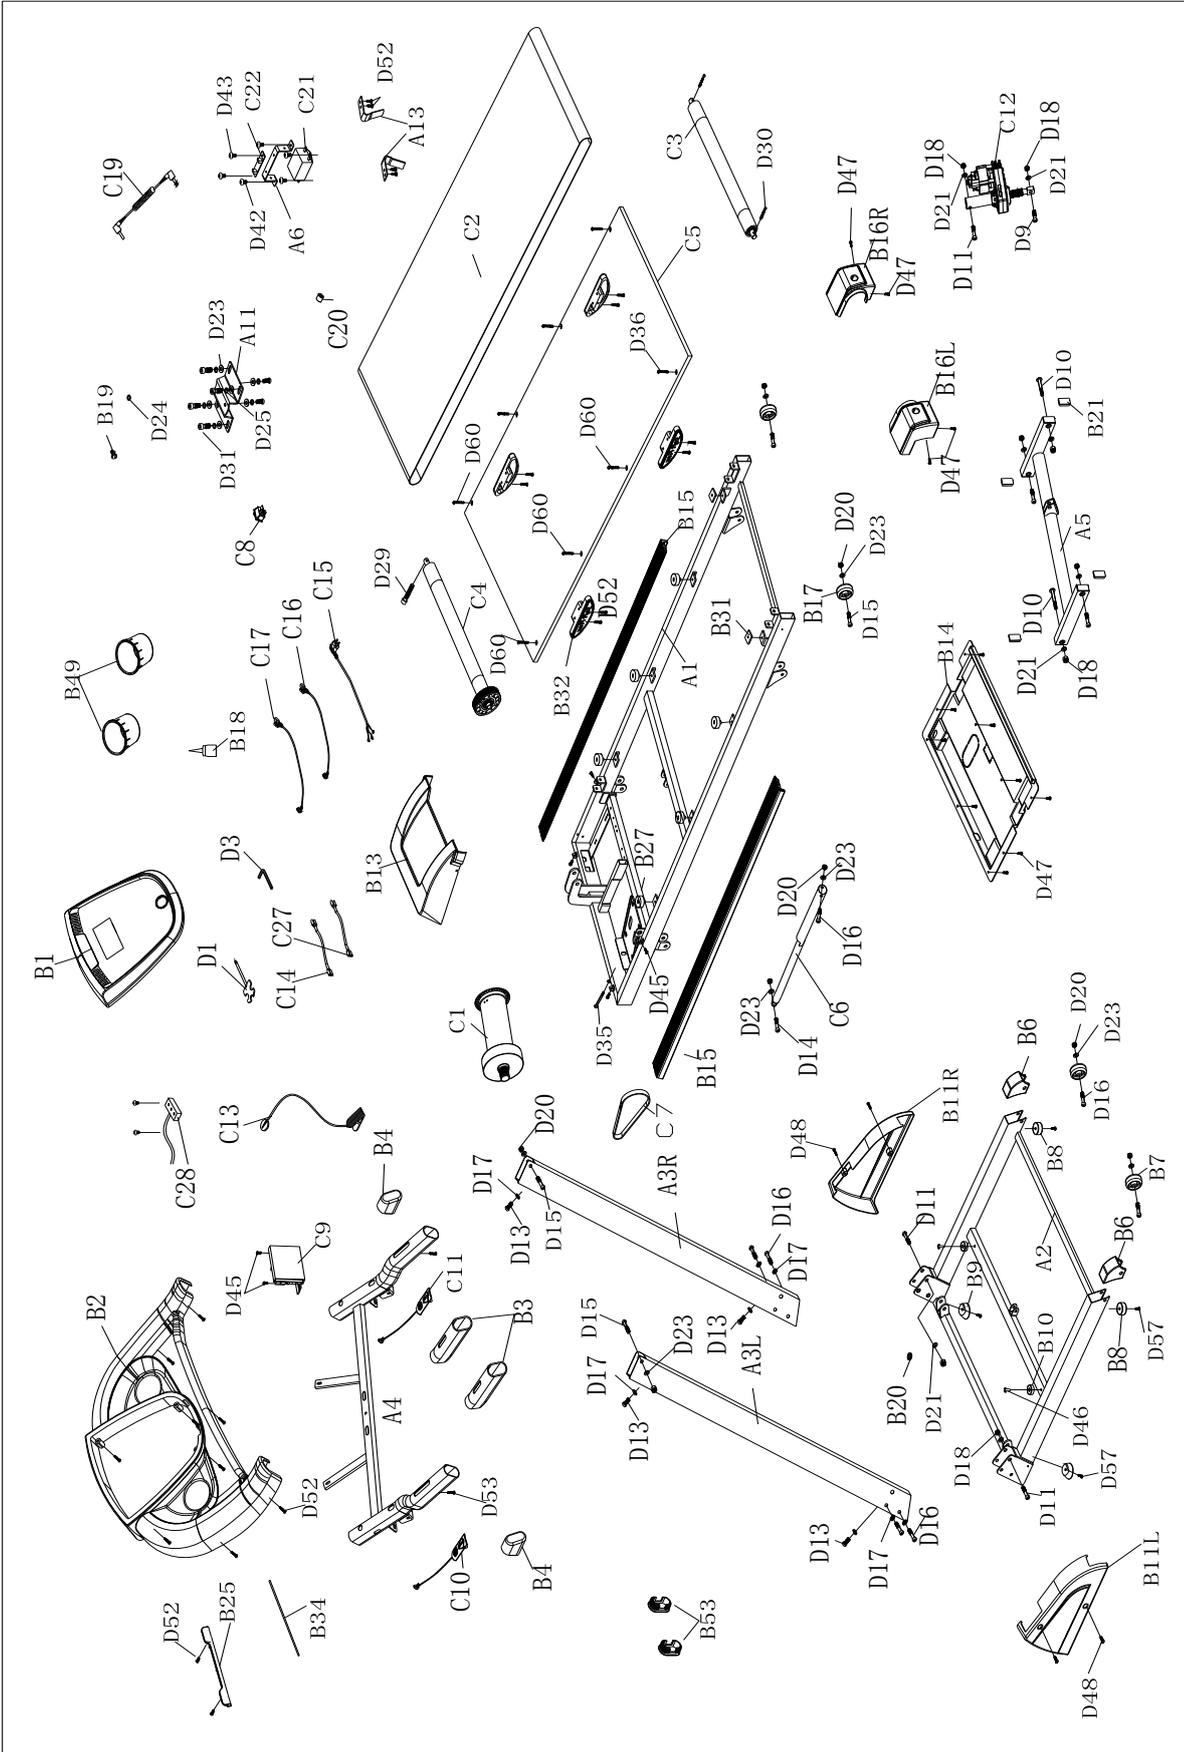

Parts list

A Welding Parts

No.	Description	QTY	No.	Description	QTY
A1	Main frame	1	A5	Incline bracket	1
A2	Base frame	1	A6	Filter bracket	2
A3L	Left upright bracket	1	A11	Motor base	1
A3R	Right upright bracket	1	A13	Belt guide	2
A4	Handrail bracket	1			

B Plastic Parts

No.	Description	QTY	No.	Description	QTY
B1	Console chip set	1	B15	Side rail	2
B1-1	Overlay	1	B16L	Left rear cover	1
B1-2	Membrane key	1	B16R	Right rear cover	1
B1-3	Console panel	1	B17	Adjust wheel	2
B2	Computer cover	1	B18	Silicon oil	1
B3	Handle bar foam	2	B19	Power line deduction	1
B4	Handrail End cap	2	B20	Protect wire cap	1
B6	Transport wheel cover	2	B21	Inner plug	4
B7	Transport wheel	2	B25	Bookcase	1
B8	Flat pads	2	B27	Cushion	6
B9	End cap	2	B31	Rubber cushion	2
B10	Limit cushion	2	B32	Oval cushion	4
B11L	Left front cover	1	B34	Rubber cushion	1
B11R	Right front cover	1	B49	Bottle	2
B13	Motor top cover	1	B53	Oval cap	2
B14	Motor bottom cover	1			

C Electrical parts

No.	Description	QTY	No.	Description	QTY
C1	DC motor	1	C13	Safety key	1
C2	Running belt	1	C14	Speed sensor	1
C3	Rear roller	1	C15	Power line	1
C4	Front roller	1	C16	Console upper wire	1
C5	Running board	1	C17	Console lower wire	1
C6	Cylinder	1	C19	MP3 Line	1
C7	Motor belt	1	C20	Magnetic ring	1
C8	Power switch	1	C21	Inductance	1
C9	Controller	1	C22	Filter	1
C10	Handle pulse left keyboard	1	C27	Single line	1
C11	Handle pulse right keyboard	1	C28	speed sensor	1
C12	Incline motor	1			

D Hardware

No.	Description	QTY	No.	Description	QTY
D1	Screw driver 13-15-17	1	D29	Hexagon socket bolt M6x45	1
D3	Allen wrench T5	1	D30	Hexagon socket bolt M6x60	2
D9	Round head hex bolt M10X30	1	D31	Hexagon socket bolt M8x20	4
D10	Round head hex bolt M10X45	4	D35	Hexagon socket bolt M8x80	1
D11	Round head hex bolt M10X50	3	D36	Cross bolt M6X25	2
D13	Round head hex bolt M8X15	4	D42	Cross washer bolt M4X10	4
D14	Round head hex bolt M8X30	1	D43	Cross washer bolt M4X20	2
D15	Round head hex bolt M8X40	4	D45	Cross washer bolt M5X15	7
D16	Round head hex bolt M8X45	7	D46	Cross washer bolt M5X20	2
D17	lock washer M8	8	D47	Cross head self taping bolt ST4.2X16	13
D18	Nylon Nut M10	8	D48	Cross head self taping bolt ST4.2X19	4

D20	Nylon Nut M8	8		D52	Cross head self tapping bolt ST4.2X16	21
D21	Flat washer M10	8		D53	Cross head self tapping bolt ST4.2X45	2
D23	Flat washer M8	17		D57	Cross head self tapping bolt ST4.2X25	4
D24	Spring washer M5	1		D60	Cross bolt M6X20	6
D25	Spring washer M8	4				

Error code and significance

Error Code	Fault Description	Solutions
E01	Failure communication between controller and computer	<ol style="list-style-type: none"> 1. Check if computer is connected to controller with correct wires, check connector, check if wire is damaged, or unplug and re-connect 2. Change inverter and test 3. Change computer and test
E02	Motor connection problem	<ol style="list-style-type: none"> 1. Check if motor wire is connected well. 2. Check if controller is working, If not, please change one.
E03	Overload protection	<ol style="list-style-type: none"> 1. Protection is activated when current is overloaded, or when motor cannot run properly. If it's the second situation, examine the treadmill and re-start it. 2. Check if there's un-normal smell. If so, please change motor or Controller. 3. Check if electric voltage works in proper range.
E04	Incline self-learning fault	Showing E4 when incline motor runs for adjustment. Adjustment is completed automatically, or it fails.
E05	Incline error	<ol style="list-style-type: none"> 1. Check if controller is working. If not, change one 2. Check if incline motor runs well 3. Check if incline sensor is connected well
E06	Rush protection	Check if there's un-normal smell. If so, change controller
— —	Computer doesn't detect safety key signal	<ol style="list-style-type: none"> 1. Check if safety key switch works, connecting wire works, or magnet inside works. 2. Safety key is not placed correctly 3. Safety key is damaged
No display on computer	No power	<ol style="list-style-type: none"> 1. Check if power cable is connected to machine or change to another power outlet. If power switch is in position, test it by switch ON/OFF. If the power switch is burned out, replace one and make sure there's power to machine. 2. Check cable connection between computer and controller 3. Replace adaptor or computer



Model No: SPORT1250

To register your warranty, please go to
www.gpisports.com.au

Distributed Exclusively by :
GPI Sports & Fitness
275 Wellington Road
Mulgrave, VIC, 3170
Australia.